



# M-POWER-1T-BEZEL

## BEZEL INSTALL GUIDE



CUT HOLE IN TOP

1


Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

2

Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".

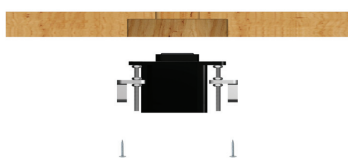

INSTALL OUTLET

3

Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.

**NOTE: Max Torque Force when tightening nuts is:  
0.4 N·cm ~ 0.6 N·cm**



SECURE SCREWS


4

Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.



# M-POWER-1T-BEZEL


**TOP  
TEMPLATE**

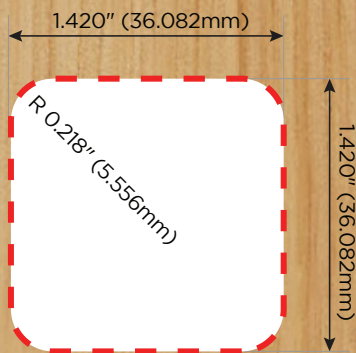






# M-POWER-1T-BEZEL

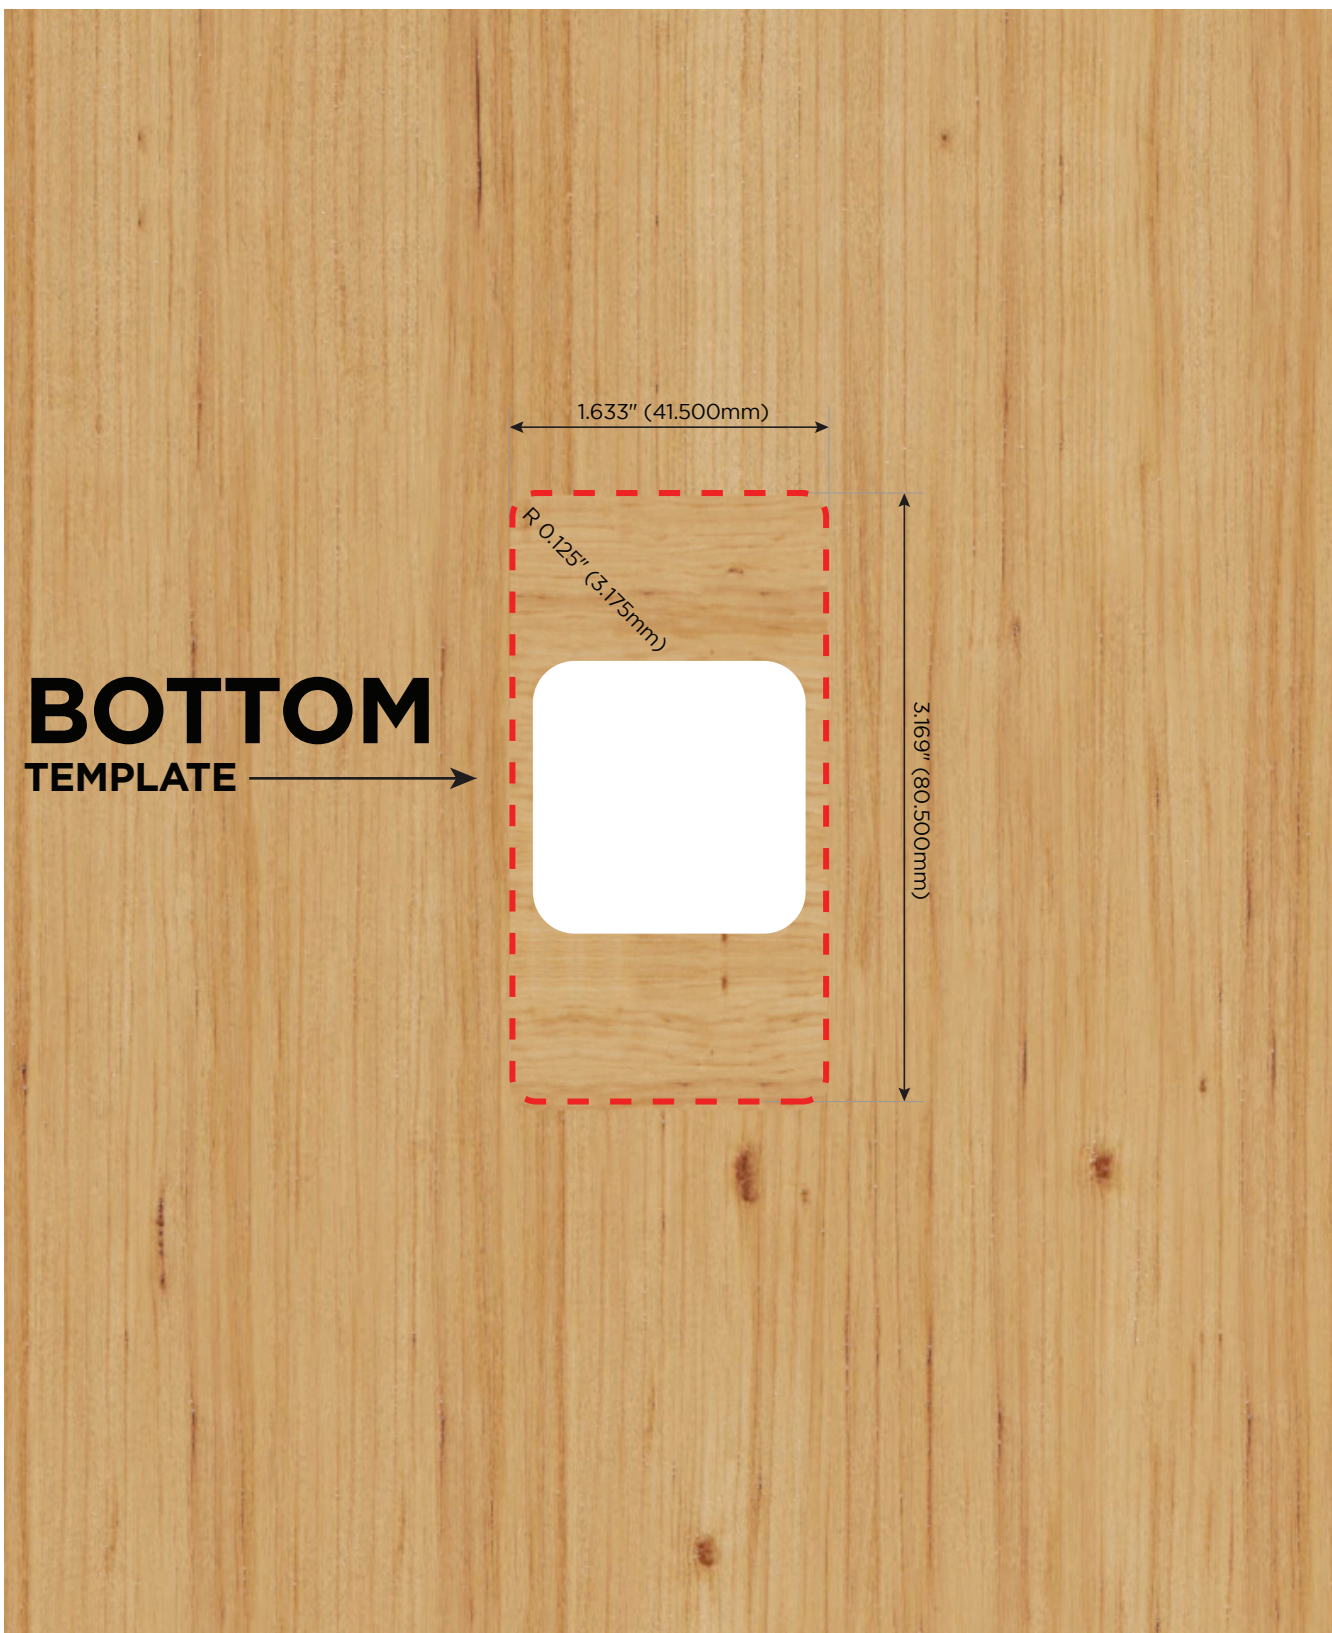



# M-POWER-1T-BEZEL

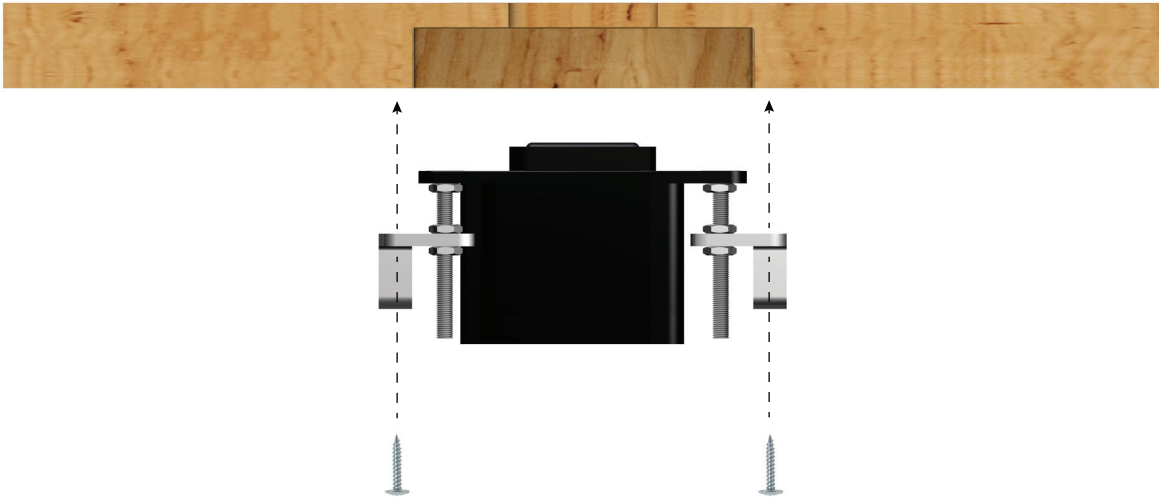

**DETAIL**

0.234" (5.944mm)