



M-POWER-1T-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE



CUT HOLE IN WOOD

1

Rout/cut mounting hole in wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".



INSTALL OUTLET


2

Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N-cm ~ 0.6 N-cm**



M-POWER-1T-TRIM PLATE

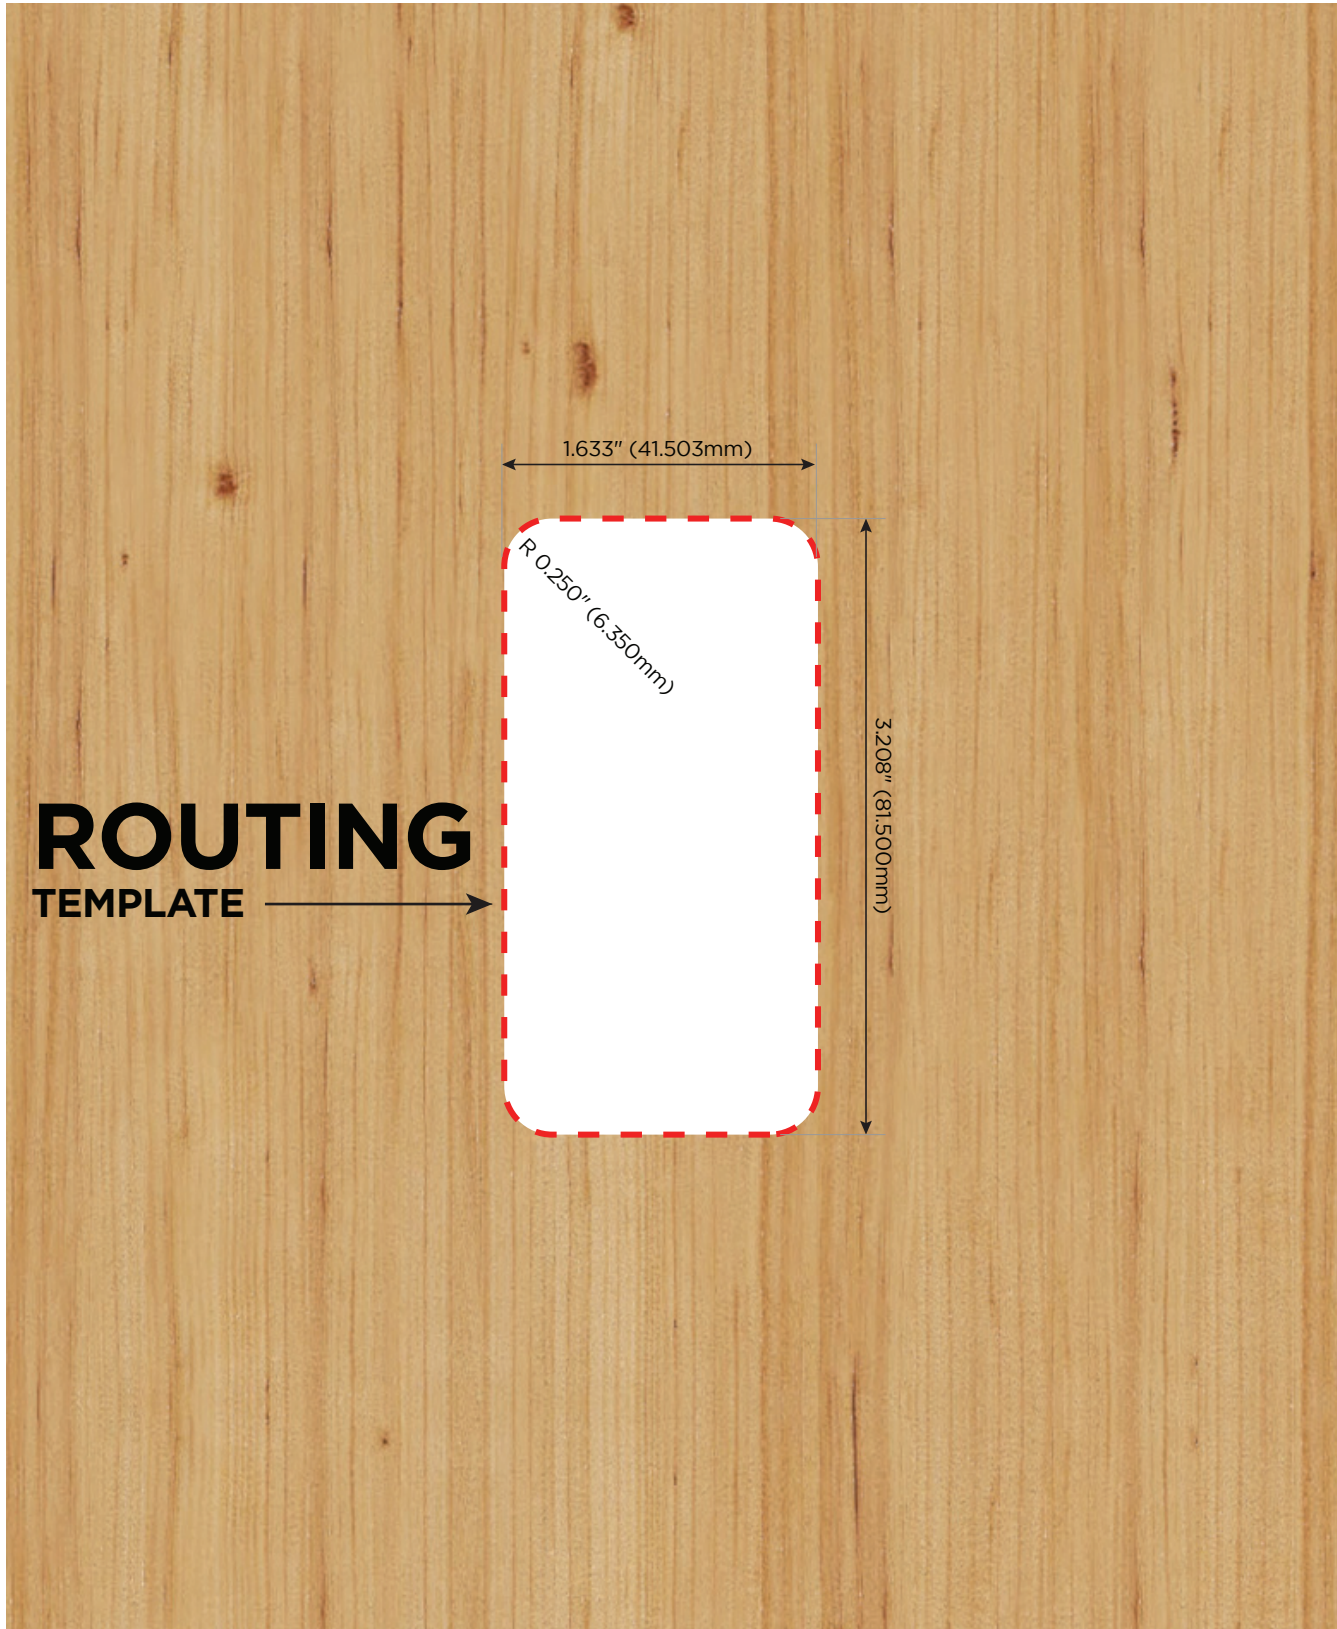



M-POWER-1T-TRIM PLATE

