



M-POWER-2T-BEZEL

BEZEL INSTALL GUIDE



CUT HOLE IN TOP

1

Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled “TOP TEMPLATE”.



CUT HOLE IN BOTTOM

2

Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled “BOTTOM TEMPLATE”.



INSTALL OUTLET

3

Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.



SECURE SCREWS

4

Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.




M-POWER-2T-BEZEL






M-POWER-2T-BEZEL

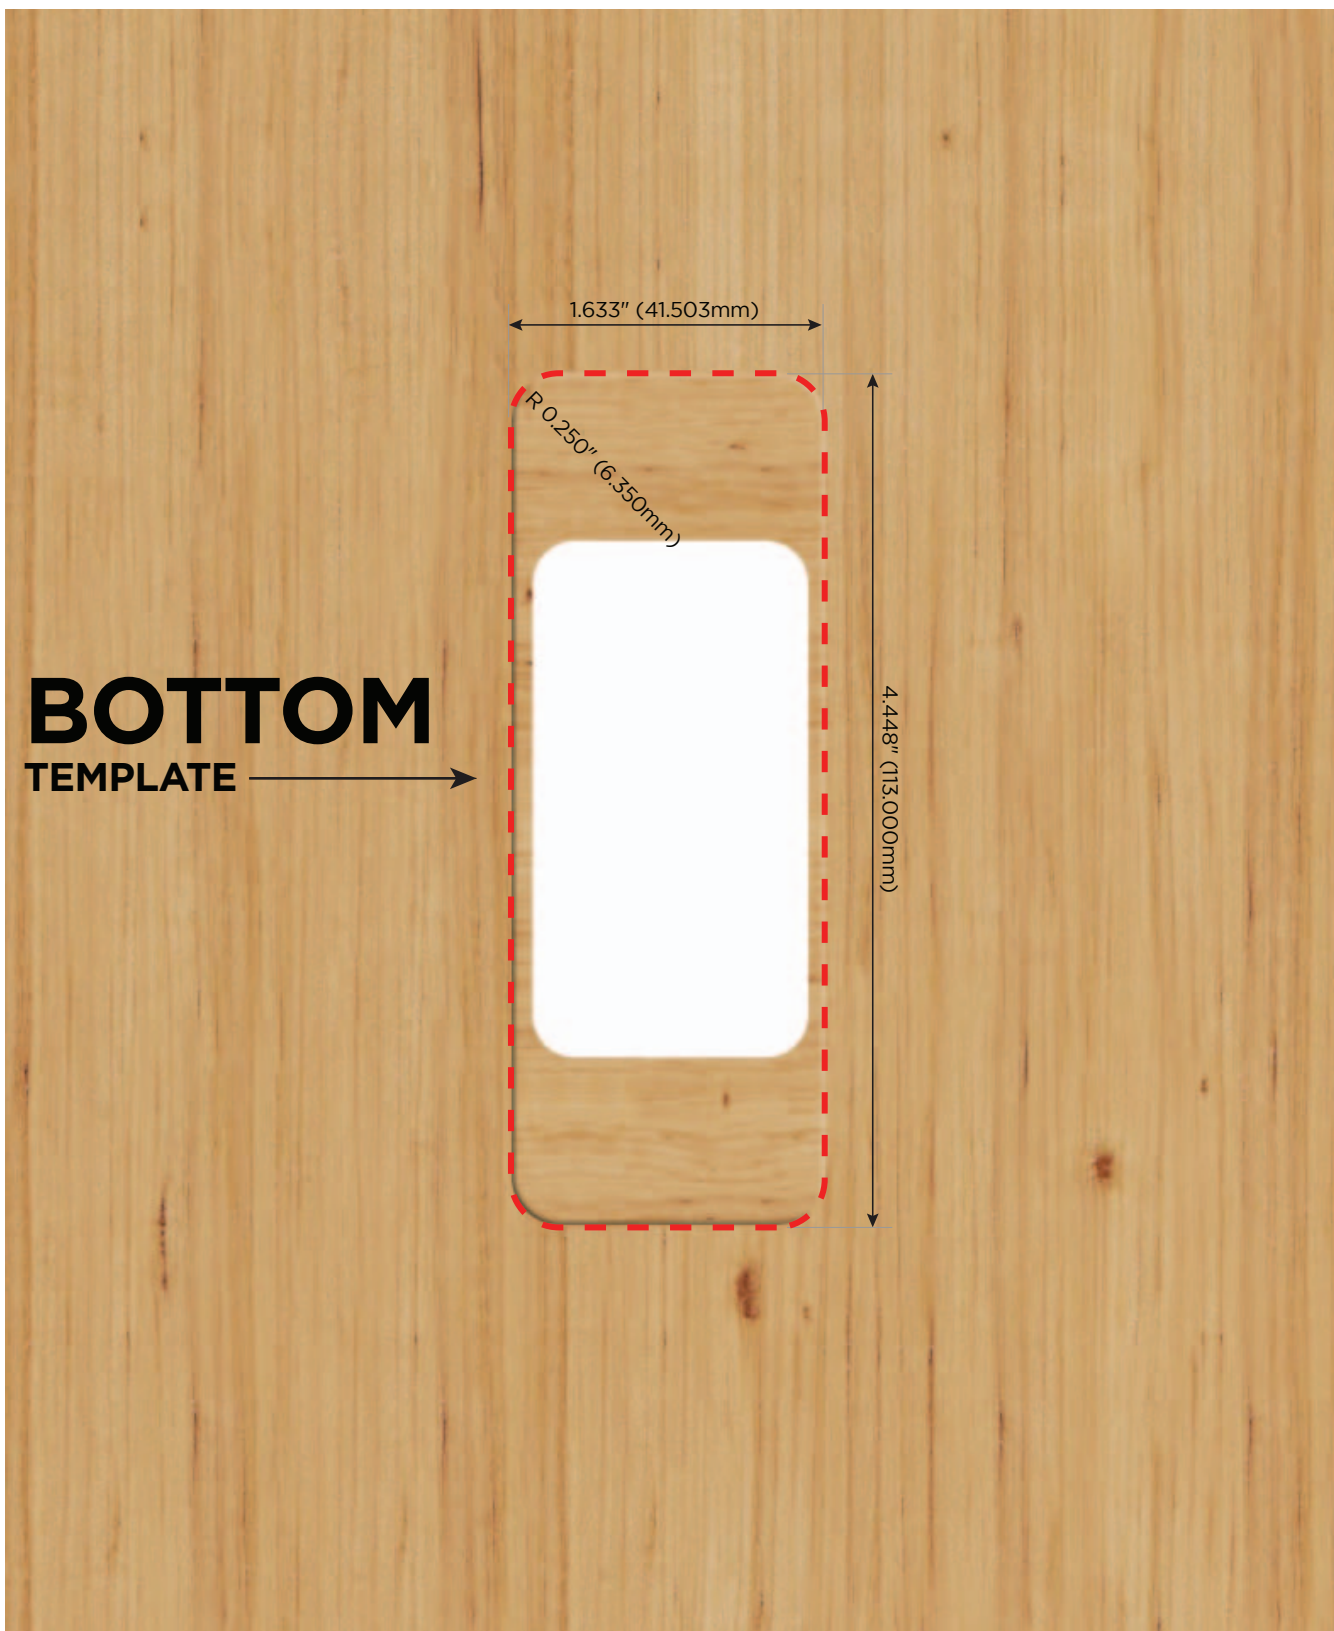



M-POWER-2T-BEZEL

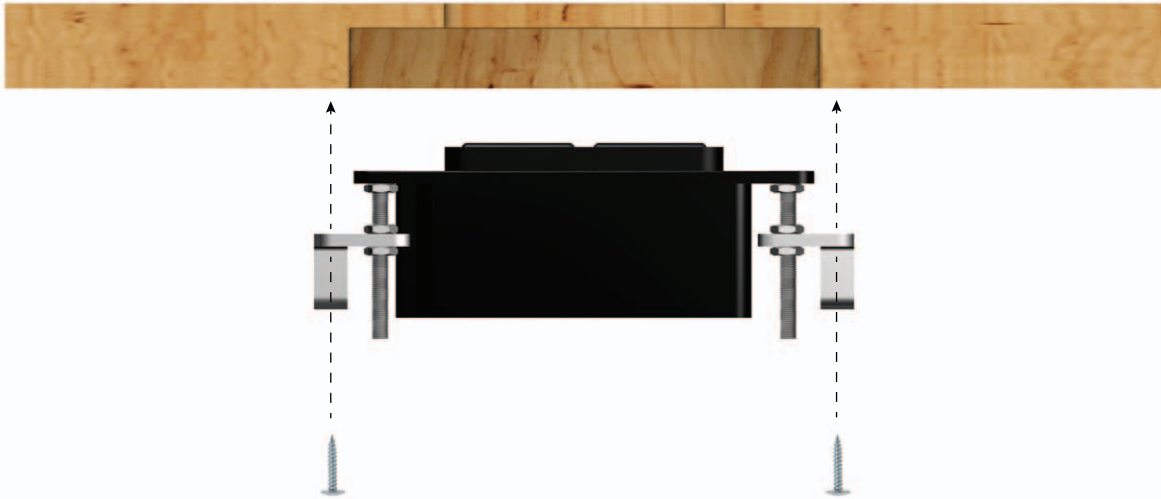

DETAIL

0.234" (5.944mm)