

M-POWER-4T-BEZEL bezel install guide



Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".

CUT HOLE IN BOTTOM



INSTALL OUTLET

Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.




Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.

SECURE SCREWS





M-POWER-4T-BEZEL

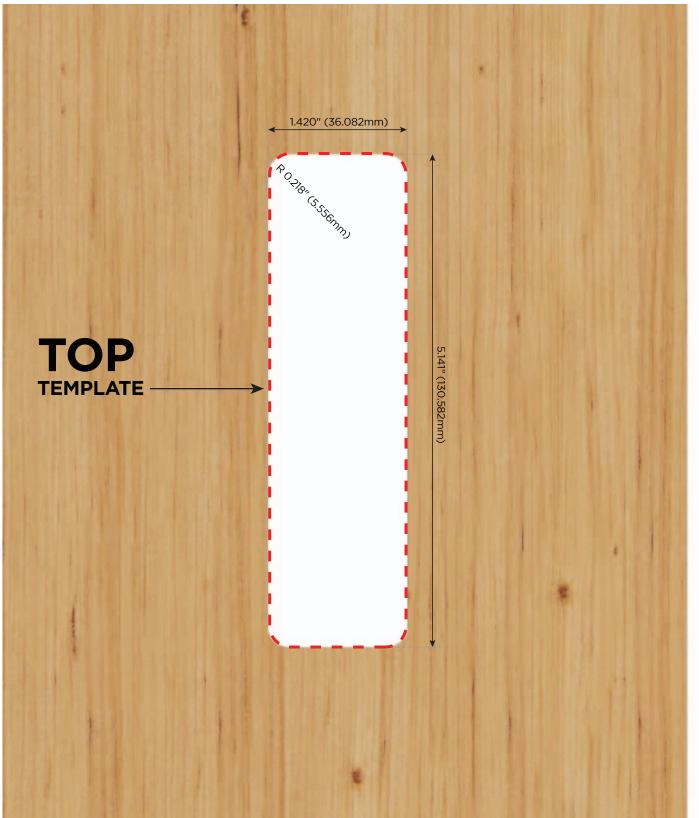





M-POWER-4T-BEZEL







M-POWER-4T-BEZEL





